

Gebruiksaanwijzing en installatievoorschriften

Kookplaten O'zone

Mode d'emploi et d'installation

Table O'zone

Montage- und Bedienungsanleitung

Kochfelder O'zone

Instructions for use and installation

O'zone hob

1109 - 1119

NOVY®

SUMMARY

SAFETY	31
PRECAUTIONS BEFORE USING	31
USING THE APPLIANCE	31
PRECAUTIONS NOT TO DAMAGE THE APPLIANCE	32
PRECAUTIONS IN CASE OF APPLIANCE FAILURE	32
OTHER PROTECTIONS.....	32
DESCRIPTION OF THE APPLIANCE	33
TECHNICAL DATA	33
CONTROL PANEL.....	33
USE	33
SENSITIVE TOUCHES	33
DISPLAY.....	33
RESIDUAL HEAT INDICATION	34
STARTING UP THE APPLIANCE.....	34
BEFORE USING YOUR NEW HOB	34
STARTING-UP.....	34
RESIDUAL HEAT INDICATION	34
CONTROL PANEL LOCKING	34
EXTENSION ZONE	35
AUTOMATIC COOKING	35
COOKING ADVICES.....	35
MAINTENANCE AND CLEANING	36
WHAT TO DO IN CASE OF A PROBLEM	36
ENVIRONMENT PROTECTION	36
INSTALLATION INSTRUCTIONS.....	37
ELECTRICAL CONNECTION	37

SAFETY

Precautions before using

- Unpack all the materials.
- The installation and connecting of the appliance have to be done by approved specialists. The manufacturer cannot be responsible for damage caused by installation or connecting errors.
- To be used, the appliance must be well-equipped and installed in a kitchen unit and an adapted and approved work surface.
- This domestic appliance is exclusively for the cooking of food, to the exclusion of any other domestic, commercial or industrial use.
- Remove all labels and self-adhesives from the ceramic glass.
- Do not change or alter the appliance.
- The cooking plate cannot be used as freestanding or as working surface.
- The appliance must be grounded and connected conforming to local standards.
- Do not use any extension cable to connect it.
- The appliance cannot be used above a dishwasher or a tumble-dryer: as steam may cause damage.

Using the appliance

- Switch the heating zones off after using.
- Keep an eye on the hob whilst cooking using grease or oils that may quickly ignite.
- Be careful not to burn yourself while or after using the appliance.
- Make sure no cable of any fixed or moving appliance contacts with the glass or the hot saucepan.
- Magnetically objects (credit cards, floppy disks, calculators) should not be placed near to the engaged appliance.
- Do not place any metallic object on the hob except for pans or cooking utensils. In case of untimely engaging or residual heat, this one may heat, melt or even burn.
- Never cover the appliance with a cloth or a protection sheet. This could become very hot and catch fire.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.

Precautions not to damage the appliance

- Raw pan bottoms or damaged saucepans (not enamelled cast iron pots,) may damage the ceramic glass.
- Sand or other abrasive materials may damage ceramic glass.
- Avoid dropping objects, even little ones, on the vitroceramic.
- Do not hit the edges of the glass with saucepans.
- Make sure that the ventilation of the appliance works according to the manufacturer's instructions.
- Do not put or leave empty saucepans on the vitroceramic hobs.
- Sugar, synthetic materials or aluminium sheets must not contact with the heating zones. These may cause breaks or other alterations of the vitroceramic glass by cooling: switch on the appliance and take them immediately out of the hot heating zone (be careful: do not burn yourself).
- Never place any hot container over the control panel.
- If a drawer is situated under the embedded appliance, make sure the space between the content of the drawer and the underside of the appliance is large enough (2cm). This is essential to guarantee correct ventilation.
- Never put any inflammable object (ex. sprays) into the drawer situated under the vitroceramic hob. All cutlery drawers must be resistant to heat.

Precautions in case of appliance failure

- If a defect is noticed, switch off the appliance and turn off at the main electrical supply.
- If the ceramic glass is cracked or fissured, you must unplug the appliance and contact the after sales service.
- Repairing has to be done by specialists. Do not open the appliance by yourself.
- **WARNING:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.

Other protections


- Note sure that the container pan is always centred on the cooking zone. The bottom of the pan must have to cover as much as possible the cooking zone.
- For the users of pacemaker, the magnetic field could influence its operating. We recommend getting information from the retailer or from the doctor.
- Do not to use aluminium or synthetic material containers: they could melt on still hot cooking zones.

DESCRIPTION OF THE APPLIANCE

Technical data

Total power	Total power	Heating zone location	Power	Diameter
1109	6400 W	Front left Rear left Rear right Front right	1000 / 2200 W 1200 W 1800 W 1200 W	135 / 210 mm 145 mm 180 mm 145 mm
1119	7000 W	Front left Rear left Rear right Front right	1000 / 2200 W 1200 W 1800 W 1800 W	135 / 210 mm 145 mm 180 mm 180 mm

Control panel

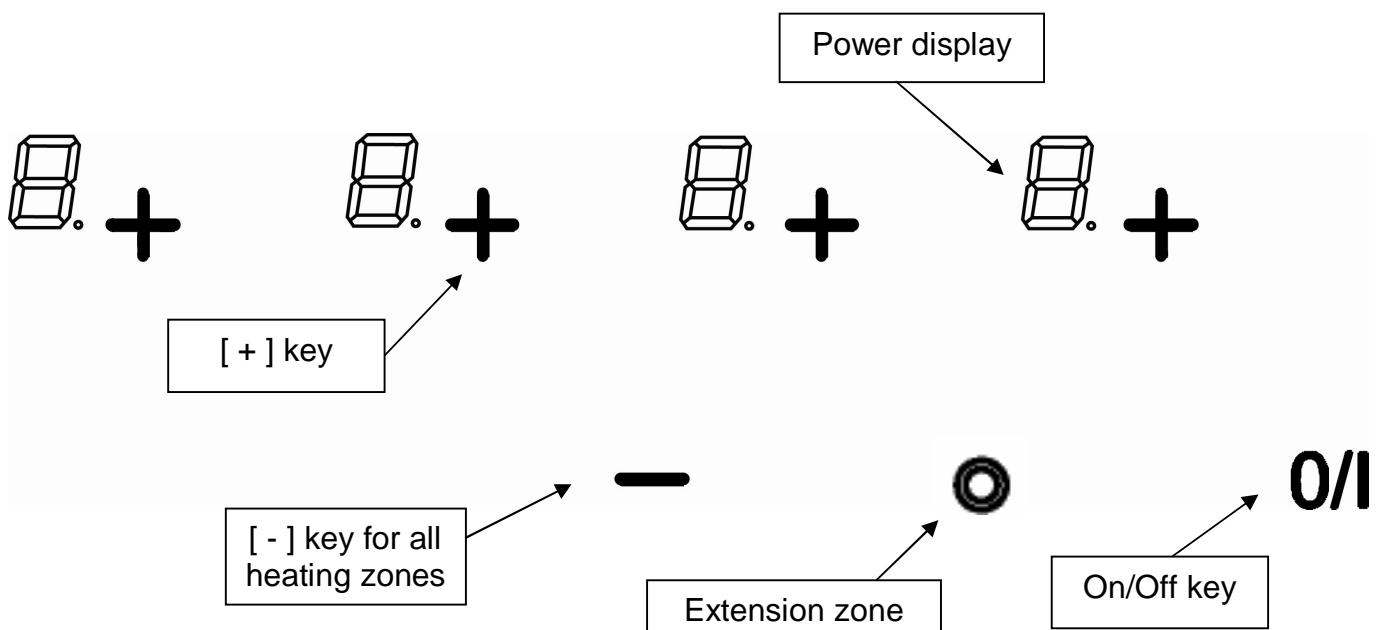

USE

Sensitive touches

Your ceramic hob is equipped with electronic controls with sensitive touch keys. When your finger touches the key, the corresponding command is activated. This activation is validated by a control light, a letter or a number in the display and/or a “beep” sound. Touch only one key on the same time.

Display

<u>Display</u>	<u>Designation</u>	<u>Function</u>
0.	Zero	The heating zone is activated
1...9	Power level	Selection of the cooking level
E	Error message	Electronic failure
A	Heat accelerator	Automatic cooking
H	Residual heat	The heating zone is hot
L	Locking	The control panel is locked

Residual heat indication

After the switch-off of the hob, the heating zone is still hot and indicates [H] on the display. The symbol [H] disappears when the heating zone may be touched safely.

When the residual heat indicator light is on, don't touch the heating zone and don't put any heat sensitive object on them. There are risks of burn and fire.

STARTING UP THE APPLIANCE

Before using your new hob

Clean your hob with a damp cloth, and then dry the surface thoroughly. Do not use detergent which risks causing blue-tinted colour on the glass surface.

Starting-up

Start-up/ switch off the hob

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
To start	Press key [0/I]	[0]
To stop	Press key [0/I]	nothing or [H]

Start-up/ switch off a heating zone

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Increase power	Press key [+]	[1] to [9]
Decrease power	Press key [-]	[9] to [1]
Stop	Press simultaneous [+] and [-]	[0] or [H]

Residual heat indication

After switching off of a heating zone or the complete stop of the hob, the heating zones are still hot and indicates [H] on the display.

The symbol [H] disappears when the heating zones may be touched without danger.

As far as the residual heat indicators are on, don't touch the heating zones and don't put any heat sensitive object on them. **There are risks of burn and fire.**

Control panel locking

To avoid modifying a setting of cooking zones, in particular with within the framework of cleaning the control panel can be locked (with exception to the On/Off key [0/I]).

Locking

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Start	Press [0/I]	[0] or [H] on 4 displays
Hob locking	Press simultaneously [-] and [+] at front left Press key [+]	No modification [L] on 4 displays

Unlocking

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Start	Press key [0/I]	[L] on 4 displays

In the 5 seconds after start :

<u>Unlocking the hob</u>	Press simultaneously [-] and [+] at left Press key [-]	[0] or [H] No light on the displays
--------------------------	--	--

Extension zone

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
select zone	Press display [0]	Control light is blinking
Select the power level	Slide on the "SLIDER"	[0] to [9]
Switch off	Touch key [⊙]	Extension zone light is off
Switch on	Touch key [⊙]	Extension zone light is on

Automatic cooking

All the cooking zones are equipped with an automatic cooking device. The cooking zone starts at full power during a certain time, then reduces automatically its power on the pre-selected level.

Switching on the automatic cooking :

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Zone selection	Press key [+]	[0]
Full power setting	Press key [+]	Pass from [1] to [9]
Automatic cooking	Re-press key [+]	[9] blinking with [A]
Power level selection (for example « 7 »)	Press key [-]	[9] pass to [8] [7] [7] blinking with [A]

Switching off the automatic cooking :

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Zone selection	Press key [+]	[7] blinking with [A]
Power level selection	Press key [-]	[0]

Cooking advices

Examples of power setting: (the values below are indicative)

1 to 2	Melting, Reheating	Sauces, butter, chocolate, gelatine Dishes prepared beforehand
2 to 3	Simmering, Defrosting	Rice, pudding, sugar syrup Dried vegetables, fish, frozen products
3 to 4	Steam	Vegetables, fish, meat
4 to 5	Water	Steamed potatoes, soups, pasta, fresh vegetables
6 to 7	Medium cooking, Simmering	Meat, liver, eggs, sausages,
7 to 8	Cooking	Potatoes, fritters, waffles
9	Frying, roasting, Boiling water	Steaks, omelettes, fried dishes, water

MAINTENANCE AND CLEANING

- Do not clean the hob if the glass is hot: risk of burn.
- Remove light marks with a damp cloth with washing up liquid diluted in a little water. Then rinse with cold water and dry the surface thoroughly.
- Highly corrosive or abrasive detergents and cleaning equipment are likely to cause scratches and must be avoided.
- Ensure that the bottom of pans is dry and clean. Ensure that there are no grains of dust on your ceramic hob or on the bottom of the pan. Sliding rough saucepans will scratch the surface.
- Spillages of sugar, jam, jelly, etc. must be removed immediately. You will thus prevent the surface being damaged.

WHAT TO DO IN CASE OF A PROBLEM

The hob or the cooking zone doesn't start-up:

- The hob is badly connected to the electrical system.
- The protection fuse has blown.
- The locking function is activated
- The sensitive keys are covered bygrease or water.
- An object is covering the control panel.

The symbol [E] displays :

- The electronic system is defective.
- Disconnect and replug the hob.
- Call the After-sales Service.


One or all cooking zones cut-off:

- The safety system has engaged
- You forgot to cut-off the cooking zone for a long time.
- One or more sensitive keys are covered.
- The pan is empty and has overheated.

ENVIRONMENT PROTECTION

- The packaging material is ecological and can be recycled.
- The worn appliances contain certain noble metals. Apply to the local government about the possibilities of recycling.

- Don't dispose of your appliance with general household waste
 - Get in touch with the waste collection centre of your local council that control the recycling of household appliances.

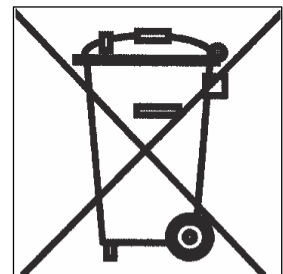

INSTALLATION INSTRUCTIONS

The installation comes under the exclusive responsibility of specialists.

The installer is held to respect the legislation and the standards enforce in his home country.

Fitting - installing:

- The piece of furniture or the support in which the hob is to be fitted, as well as the edges of furniture, the laminate coatings and the glue used to fix them, must be able to resist temperatures of up to 100 °C.
- The mural rods of edge must be heat-resisting.
- The hobs are classified as “Y” class for heat protection. Ideally the hob should be installed with plenty of space on either side. There may be a wall at the rear and tall units or a wall at one side. **On the other side, however, no unit or divider must stand higher than the hob.**
- Ensure that there is a distance of 50 mm between the hob and the wall or sides.
- The cut out sizes are:

Ref	Cut size		Cut size flush line			Glass size		
	Width	Depth	Width	Width	Depth	Width	Width	Depth
1109	560	490	596	526	11	590	520	4
1119	750	490	786	526	11	780	520	4

- Materials which are often used to make worktops expand on contact with water. To protect the cut out edge, apply a coat of varnish or special sealant. Particular care must be given to applying the adhesive joint supplied with the hob to prevent any leakage into the supporting furniture. This gasket guarantees a correct seal when used in conjunction with smooth work top surfaces.
- Do not install the hob to the top of a non ventilated oven or a dishwasher.
- If a drawer is placed under the hob, avoid putting into this drawer flammable objects (for example: sprays) or non heat-resistant objects.
- The safety gap between the hob and the cooker hood placed above must respect the indications of the hood manufacturer. In case of absence of instructions respect a distance minimum of 760 mm.
- The wire connection must not be obstructed or fouled by, a working drawer or obstacles contained within such drawer.
- The installation of the hob in nonstationary sites (for example: boat, motor home) should be undertaken by specialists.

ELECTRICAL CONNECTION

The installation of this appliance and the connection to the electrical system should be entrusted only to a qualified electrician.

Protection against the parts under tension must be ensured after installation

The data of connection necessary are on the stickers place on the hob casing near the connection box.

The connection to the mains must be made using an earthed plug or via an omnipolar circuit breaking device with a contact opening of at least 3 mm.

The electrical circuit must be separated from the network by adapted devices, for example: circuit breakers, fuses or contactors.

Mains	Connection	Cable diameter	Cable	Protection calibre
230V~1N 50/60Hz	1 Phase + N	3 x 2,5 mm ²	H 05 VV - F H 05 RR - F	25 A *
400V~2N 50/60Hz	2 Phases + N	4 x 1.5 mm ²	H 05 VV - F H 05 RR - F	16 A *

(*) calculated with the simultaneous factor following standard EN 60 335-2-6/1990

Caution!

This appliance has only to be connected to a network 230 V~ 50/60 Hz

Always connect the earth wire.

Respect the connection diagram.

The connection box is located underneath at the back of the hob casing. To open the cover, use a medium screwdriver. Place it in the slits and open the cover.

Setting up the configurations:

For the various kinds of connection, use the brass links which are in the box next to the terminal block. Except for where the appliance is pre-wired.

