


Mode d'emploi  
Gebruiksaanwijzing  
Gebrauchsanweisung  
Instructions for use  
Hoja de Características  
Istruzioni d'uso

**2140**



**NOVY®**

## Control Panel

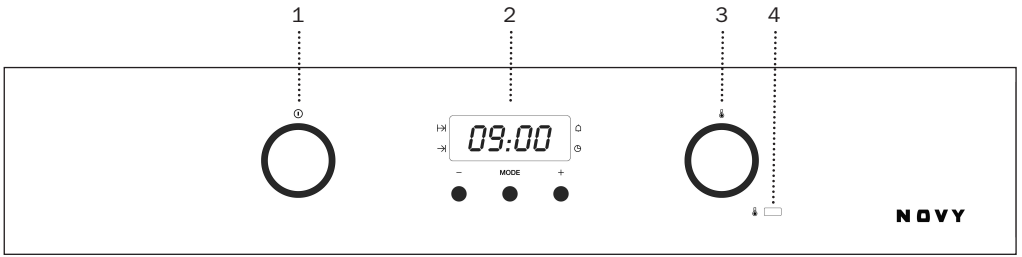

**1** Function selector.

**2** Electronic clock.

**3** Temperature selector.

**4** Heating indicator light.\*

\* Indicates that the oven is still heating up, light goes out when the selected temperature is reached.

## Oven Functions

### ☐ Switch off oven

#### Conventional with fan

Appropriate for roasts and cakes. The fan spreads the heat uniformly inside the oven.

#### Conventional

It is used for sponges and cakes where the heat received must be uniform to achieve a spongy texture.

#### MaxiGrill with fan

Allows uniform roasting at the same time as surface browning. Ideal for grills. Special for large volume pieces, such as poultry game etc. It is recommended to put the item on a rack with a tray beneath to collect the stock and juices.

#### MaxiGrill

Allows greater surfaces to be prepared, than with the grill, together with higher power reducing the time required for browning of the food.

#### Grill

For preparing dishes with superficial roasting. It allows the outer layer to be browned without affecting the inside of the food. Ideal for flat food, such as steaks, ribs, fish, toast.

### Caution

While using the Grill, MaxiGrill or MaxiGrill with fan, the door must be kept closed.

#### Grill and Lower element

Special for roasts. It can be used for any piece, whatever its size.

#### Lower element

Heats only from beneath. Suitable for heating dishes and raising pastry and similar.

#### Defrosting

This cooking mode is suitable for gently defrosting of food. In special food to be consumed unwarmed, e.g.: cream, custard, pastry, tarts, cakes, fruit,...

### Note

The pilot light remains on in any cooking function.

### Setting the time on the clock

On connecting the oven, you will notice that 12:00 appears on the clock and that a light begins to flash next to the ☹ symbol. Pressing the “+” and “-” buttons the correct time can be set on the clock, which is subsequently stored and the flashing light goes out.

### Manual use

After setting the correct time, the oven is ready for use. Select a temperature and a cooking function.

To switch off the oven, set the controls to the position □.

### Functions of the Electronic Clock Programmer

**Timer function:** This function generates a warning tone at a specified time.

**Cooking time:** This function allows to programme the oven to cook for a specified time, after which it will switch itself off.

**End of cooking time:** This function allows to establish the exact hour, after which the oven will switch itself off.

**Duration and automatic stop:** This function is used to control the duration and the time at which the oven will turn itself off. This function allows the oven to start and stop automatically.

### Warning function

- 1 Press the MODE button until the signal next to the ☹ symbol begins to flash.
- 2 Choose the time when you want the alarm to sound, pressing the “+” or “-” buttons.
- 3 Subsequently, the light will remain on indicating that the alarm is programmed.
- 4 At the end of the programmed time, an alarm will sound and the light will begin to flash.
- 5 Press any button to turn off the alarm and the screen shows the current time again.

### Programming the cooking time

- 1 Press the MODE button until the indicator next to the |→| symbol begins to flash.
- 2 Select the length of time, pressing the “+” or “-” buttons.
- 3 Subsequently, the indicator that was flashing will light, indicating that the oven will switch itself off automatically.
- 4 The clock will then show the current time.
- 5 Select a temperature and cooking function.
- 6 When the set time has elapsed, the oven will disconnect, an alarm will sound and the indicator will begin to flash.
- 7 Press any button to switch off the alarm, reconnecting the oven.
- 8 Set the controls in the position □ to switch off the oven.

### Programming the end of cooking time for the oven

- 1 Press the MODE button until the indicator next to the →| symbol begins to flash.
- 2 Select the time that cooking is to finish, pressing the “+” or “-” buttons.
- 3 Subsequently, the indicator that was flashing is lit, indicating that the oven will switch itself off automatically.
- 4 The clock will then show the current time.
- 5 Select a temperature and a cooking function.
- 6 When the programmed time is reached, the oven will disconnect, an alarm will sound and the indicator will begin to flash.
- 7 Press any button to switch off the alarm and the oven will reconnect.
- 8 Set the controls to the position □ to switch off the oven.

This function may be used even though you are already cooking in your oven. To do so, follow the instructions given except N° 5.

## Programming the duration and automatic stop

- 1 Press the MODE button until the indicator next to the  $\text{I} \rightarrow \text{I}$  symbol begins to flash.
- 2 Select the length of cooking time pressing the “+” or “-” buttons.
- 3 Subsequently, the indicator that was flashing will remain lit.
- 4 Press the mode button until the indicator next to the  $\rightarrow \text{I}$  symbol begins to flash.
- 5 Select the time that cooking should finish pressing the “+” or “-” buttons.
- 6 Subsequently, the indicator that was flashing will remain lit.
- 7 Select a function and cooking temperature.
- 8 The oven will remain disconnected with the indicators next to the  $\text{I} \rightarrow \text{I}$  and  $\rightarrow \text{I}$  symbols lit. Your oven is programmed.
- 9 When the time to begin cooking is reached, the oven will switch itself on and will continue cooking during the programmed time.
- 10 When the programmed finishing time is reached, the oven will disconnect, an alarm will sound and the light next to the  $\rightarrow \text{I}$  symbol will begin to flash.

**11** Press any button to switch off the alarm and the oven will reconnect.

**12** Set the controls to the position  $\square$  to switch of the oven.

### Caution

Pressing the MODE button the display on the screen shows any function programmed. It can be changed by pressing the “+” or “-” buttons. On selecting the desired function, the indicator next to the corresponding symbol will light.

In the event of a power cut, all the programming of the electronic clock will be erased. The correct time has to be reset and the watch reprogrammed.

